



A ONLY SOME MODULES LIGHT UP

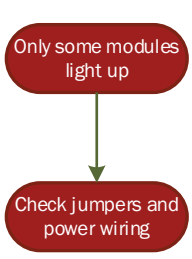


B PANEL DOES NOT LIGHT UP

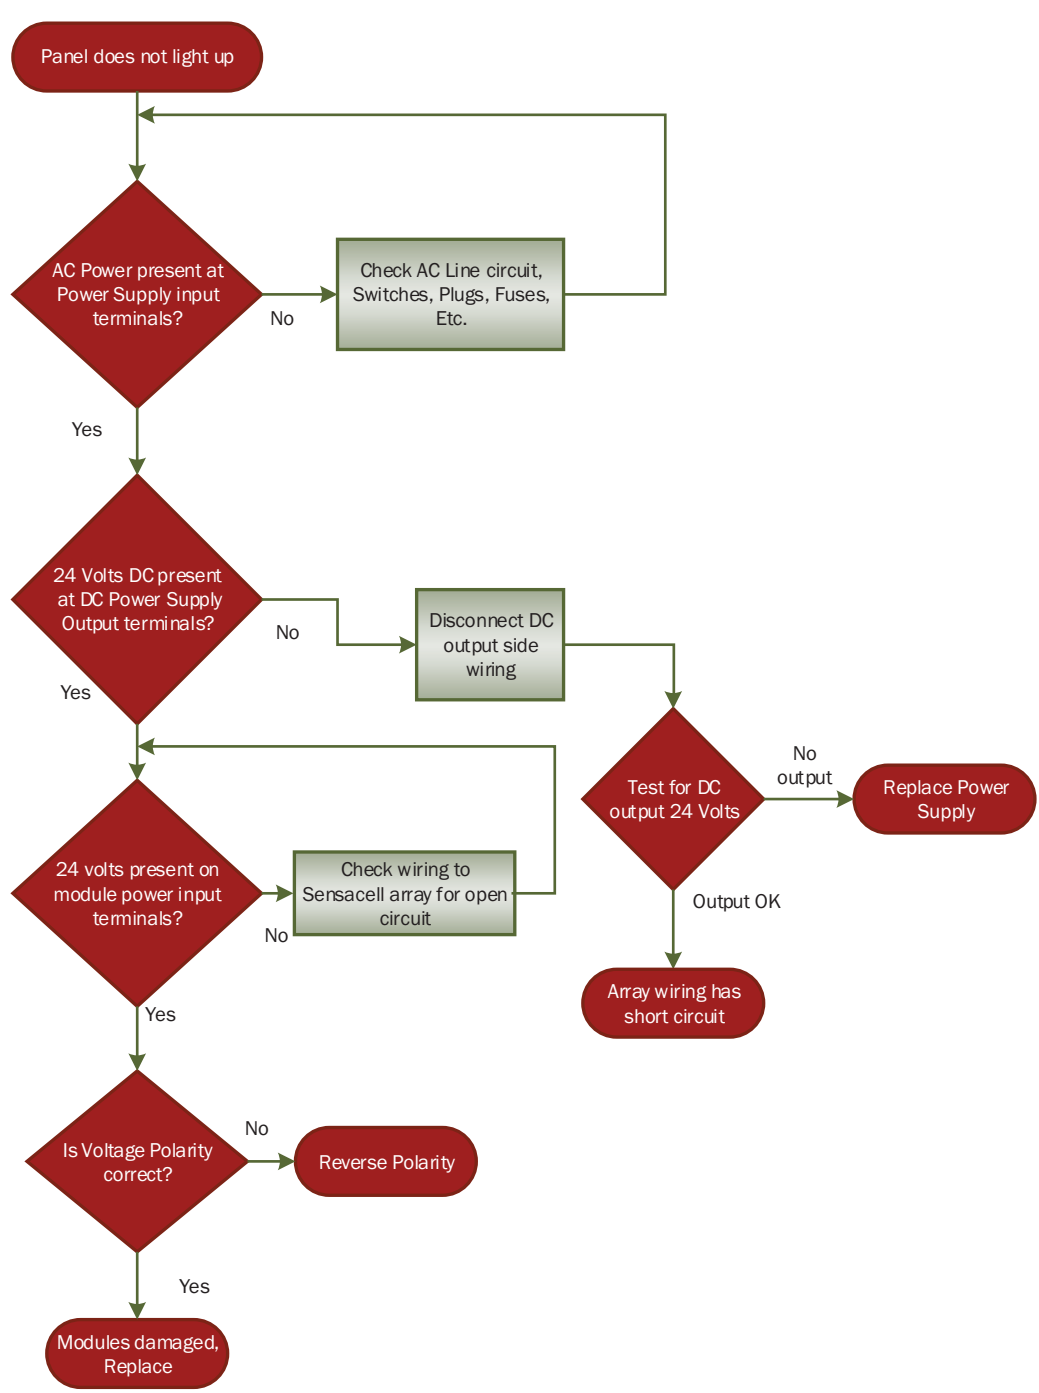

C START UP SEQUENCE

Page 1

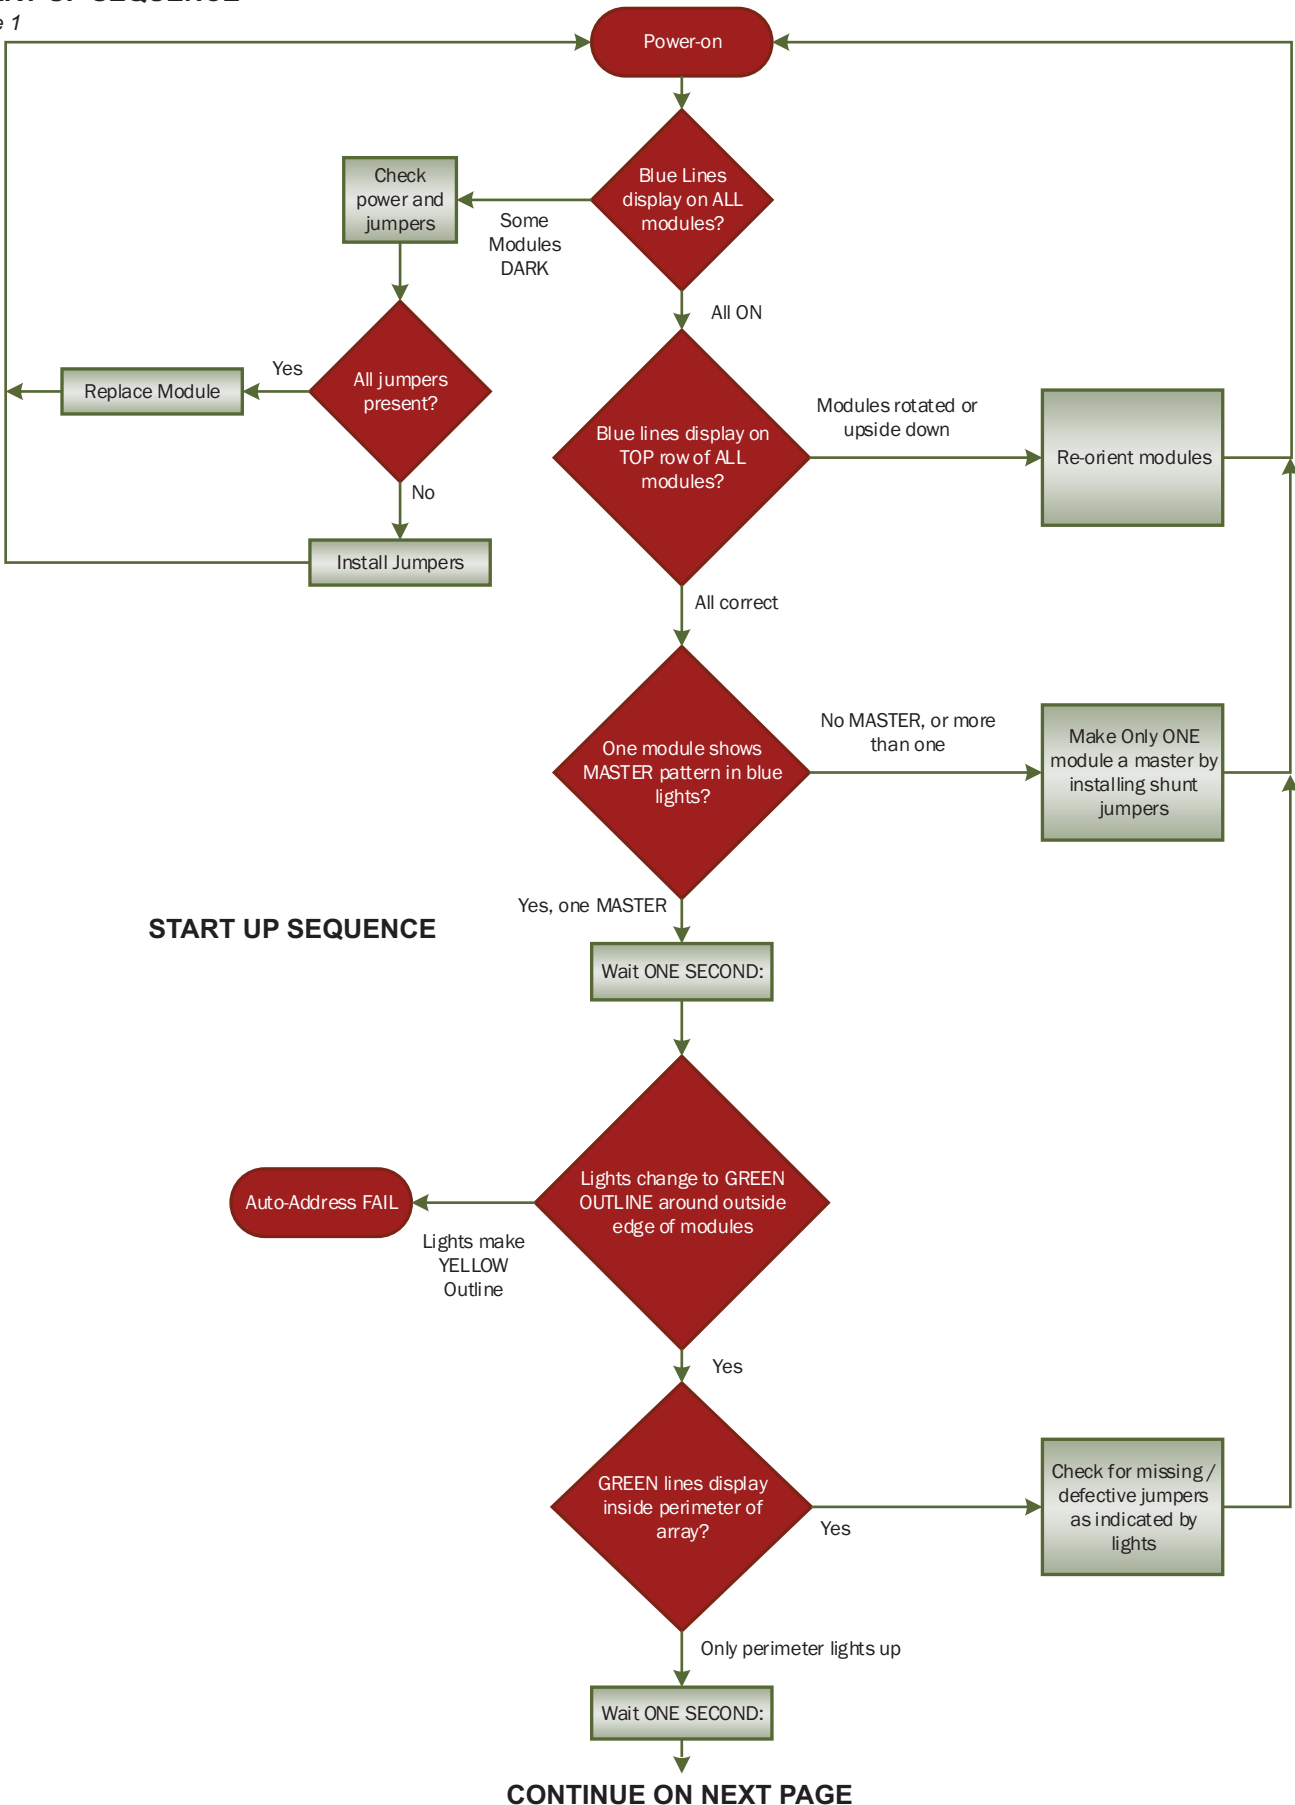


START UP SEQUENCE


CONTINUE ON NEXT PAGE

C START UP SEQUENCE Page 2


CONTINUED FROM PREVIOUS PAGE

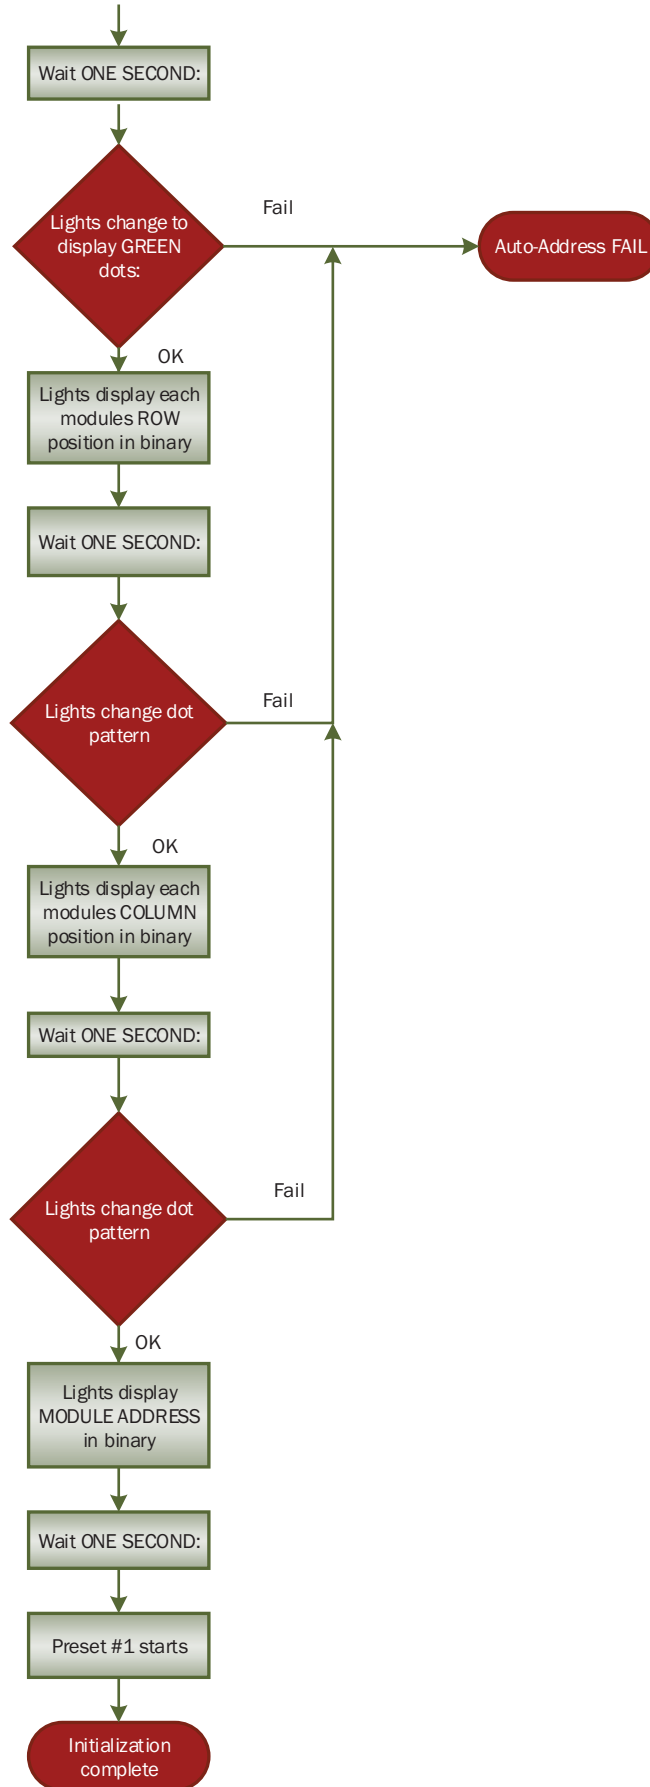


D ARRAY POWER WIRING SHORT CIRCUIT

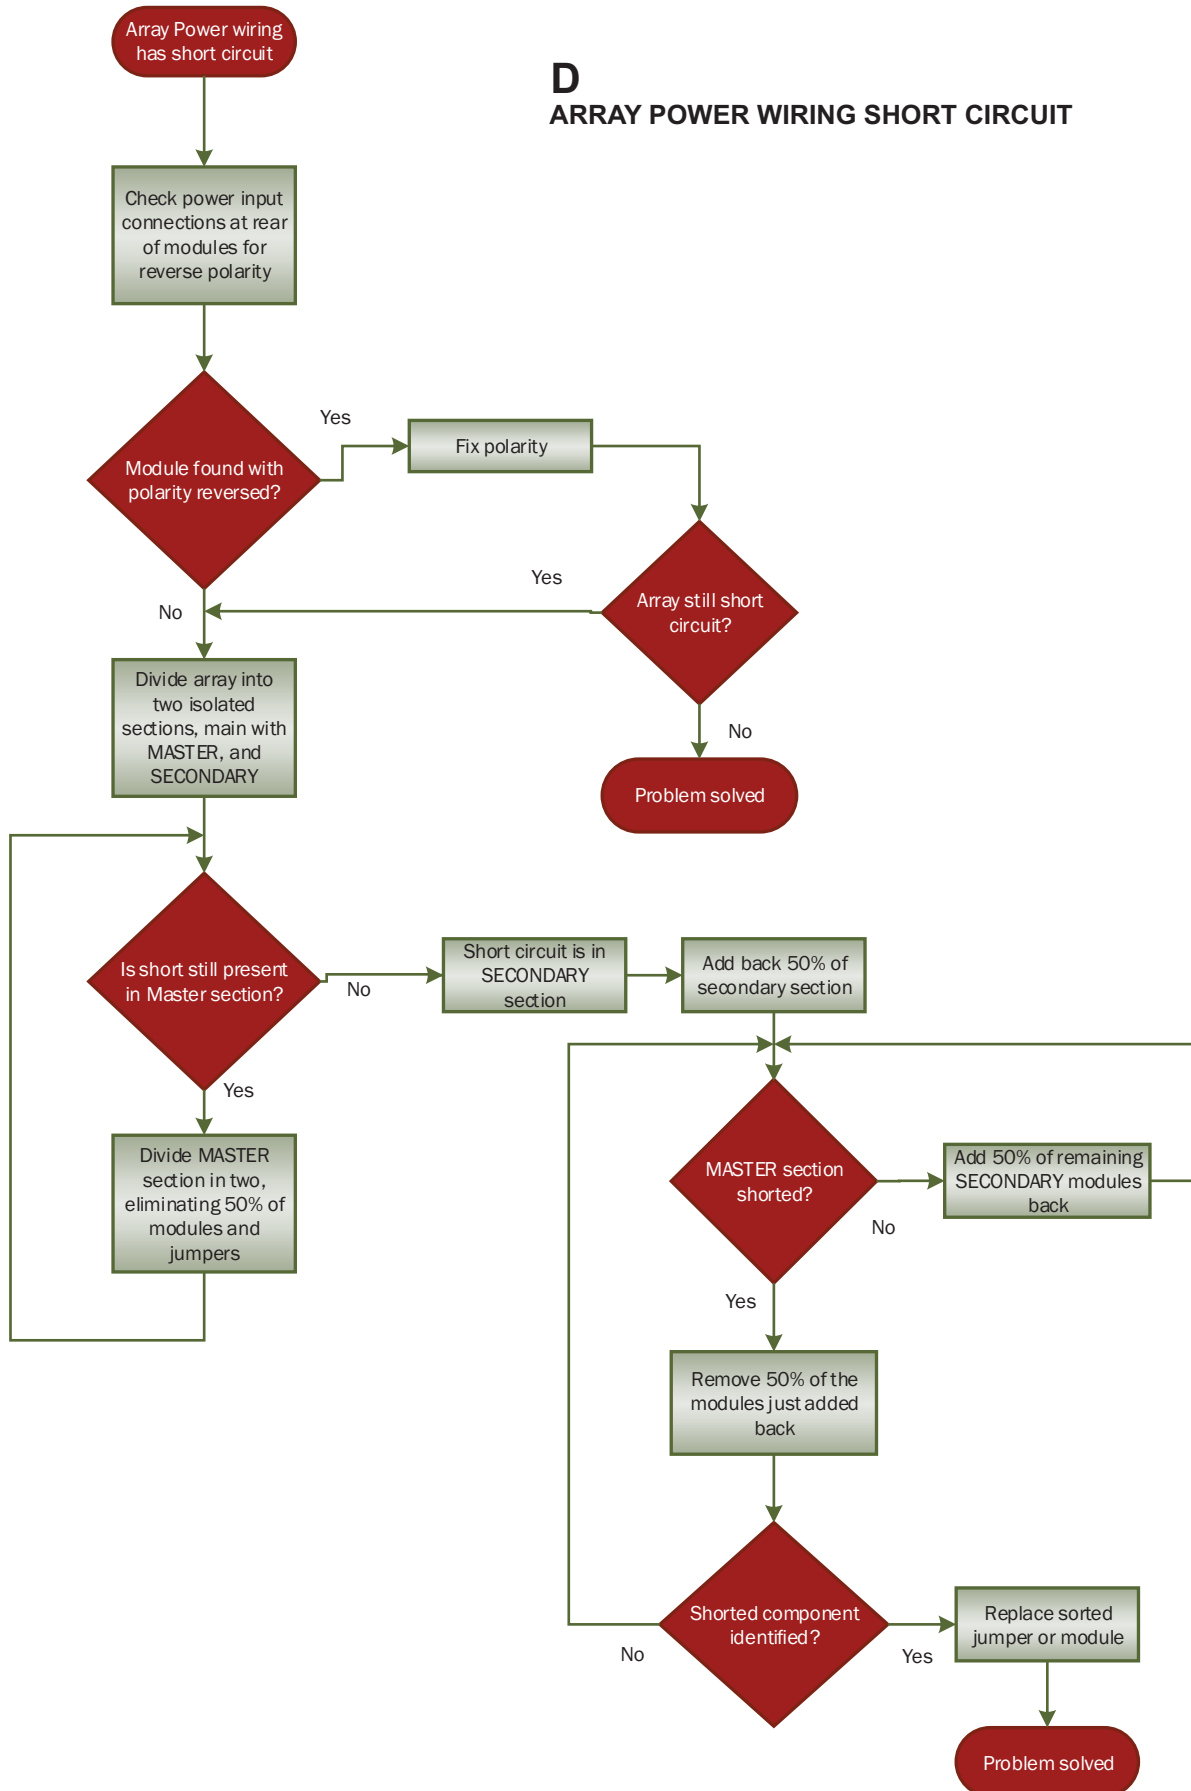

E ARRAY FAILS AUTO ADDRESSING START UP SEQUENCE ON POWER-UP

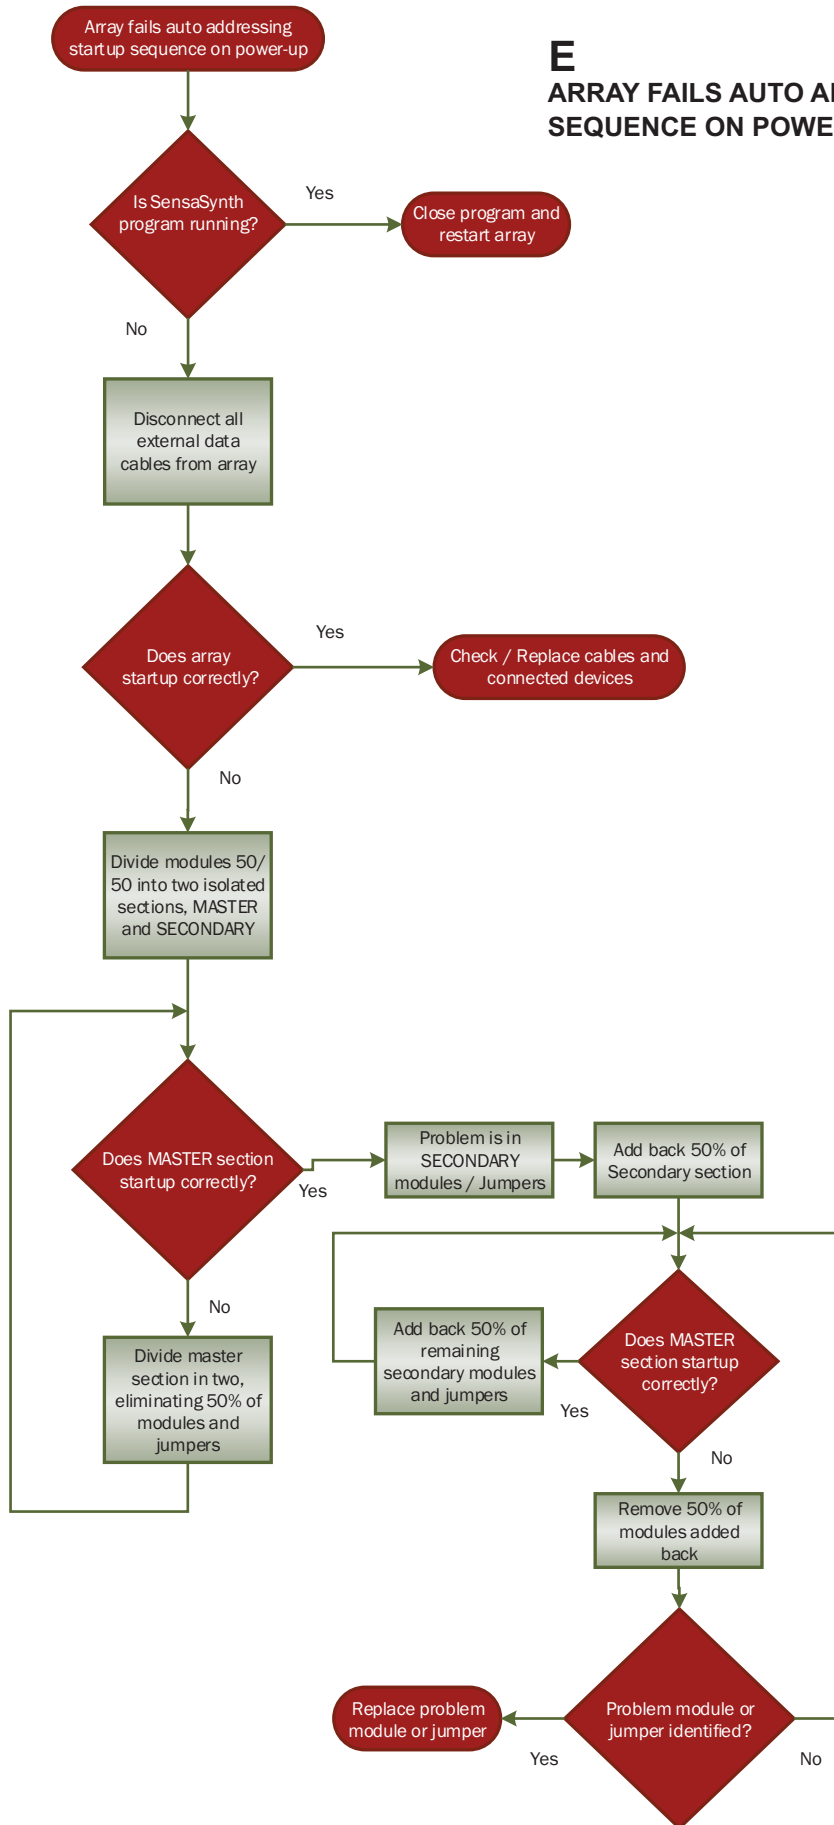


F ARRAY POWER DISTRIBUTION DESIGN

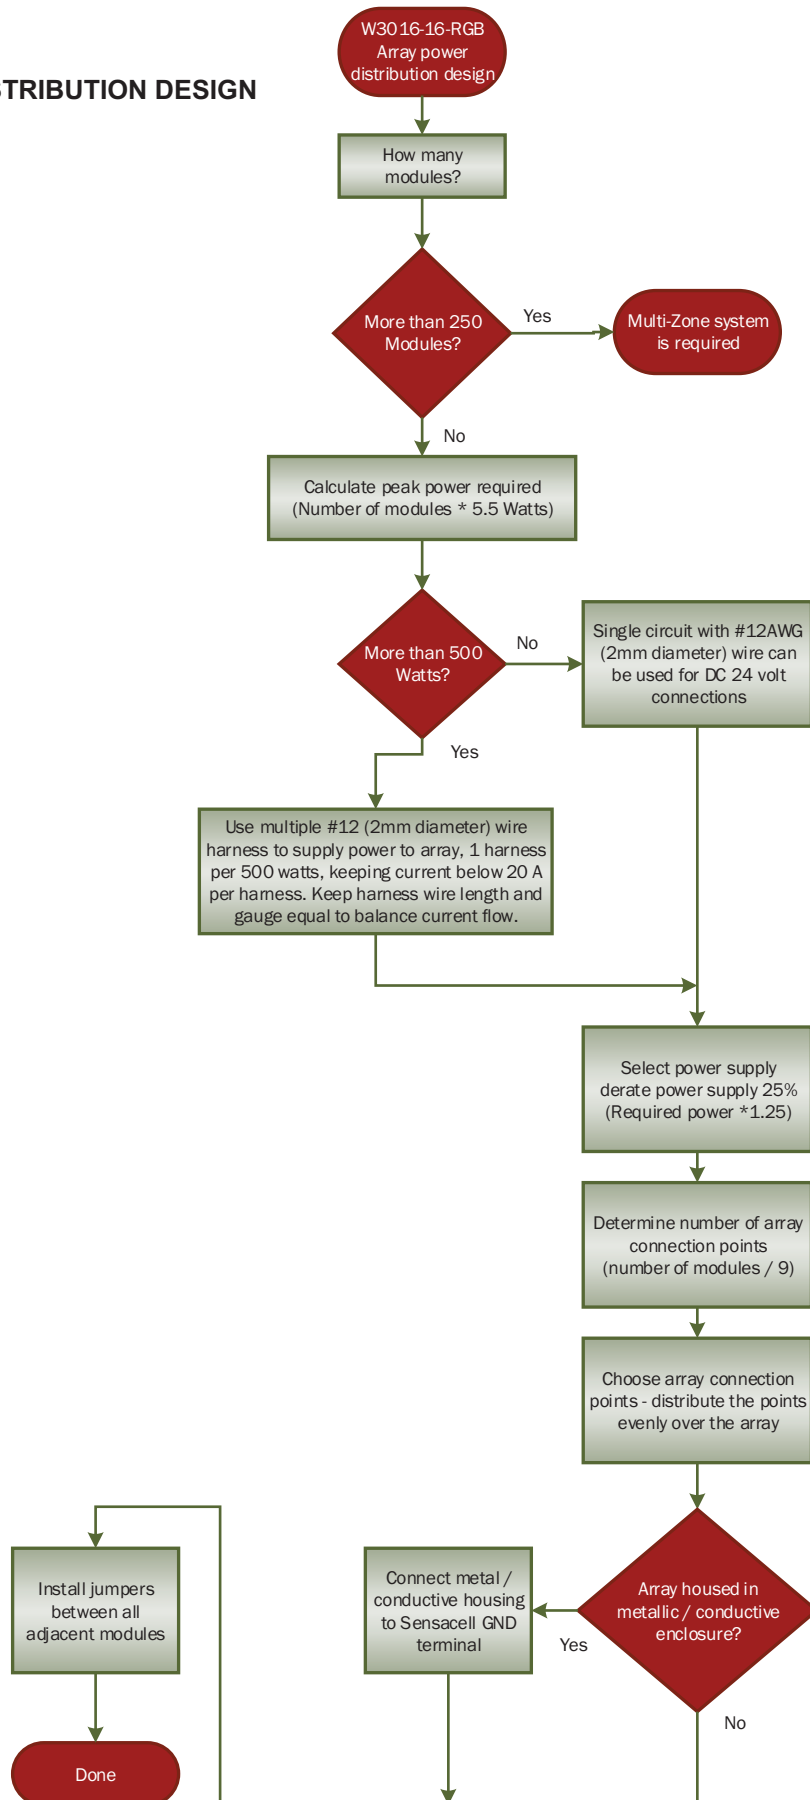


G SENSORS ARE BEHAVING ERRATICALLY

Page 1

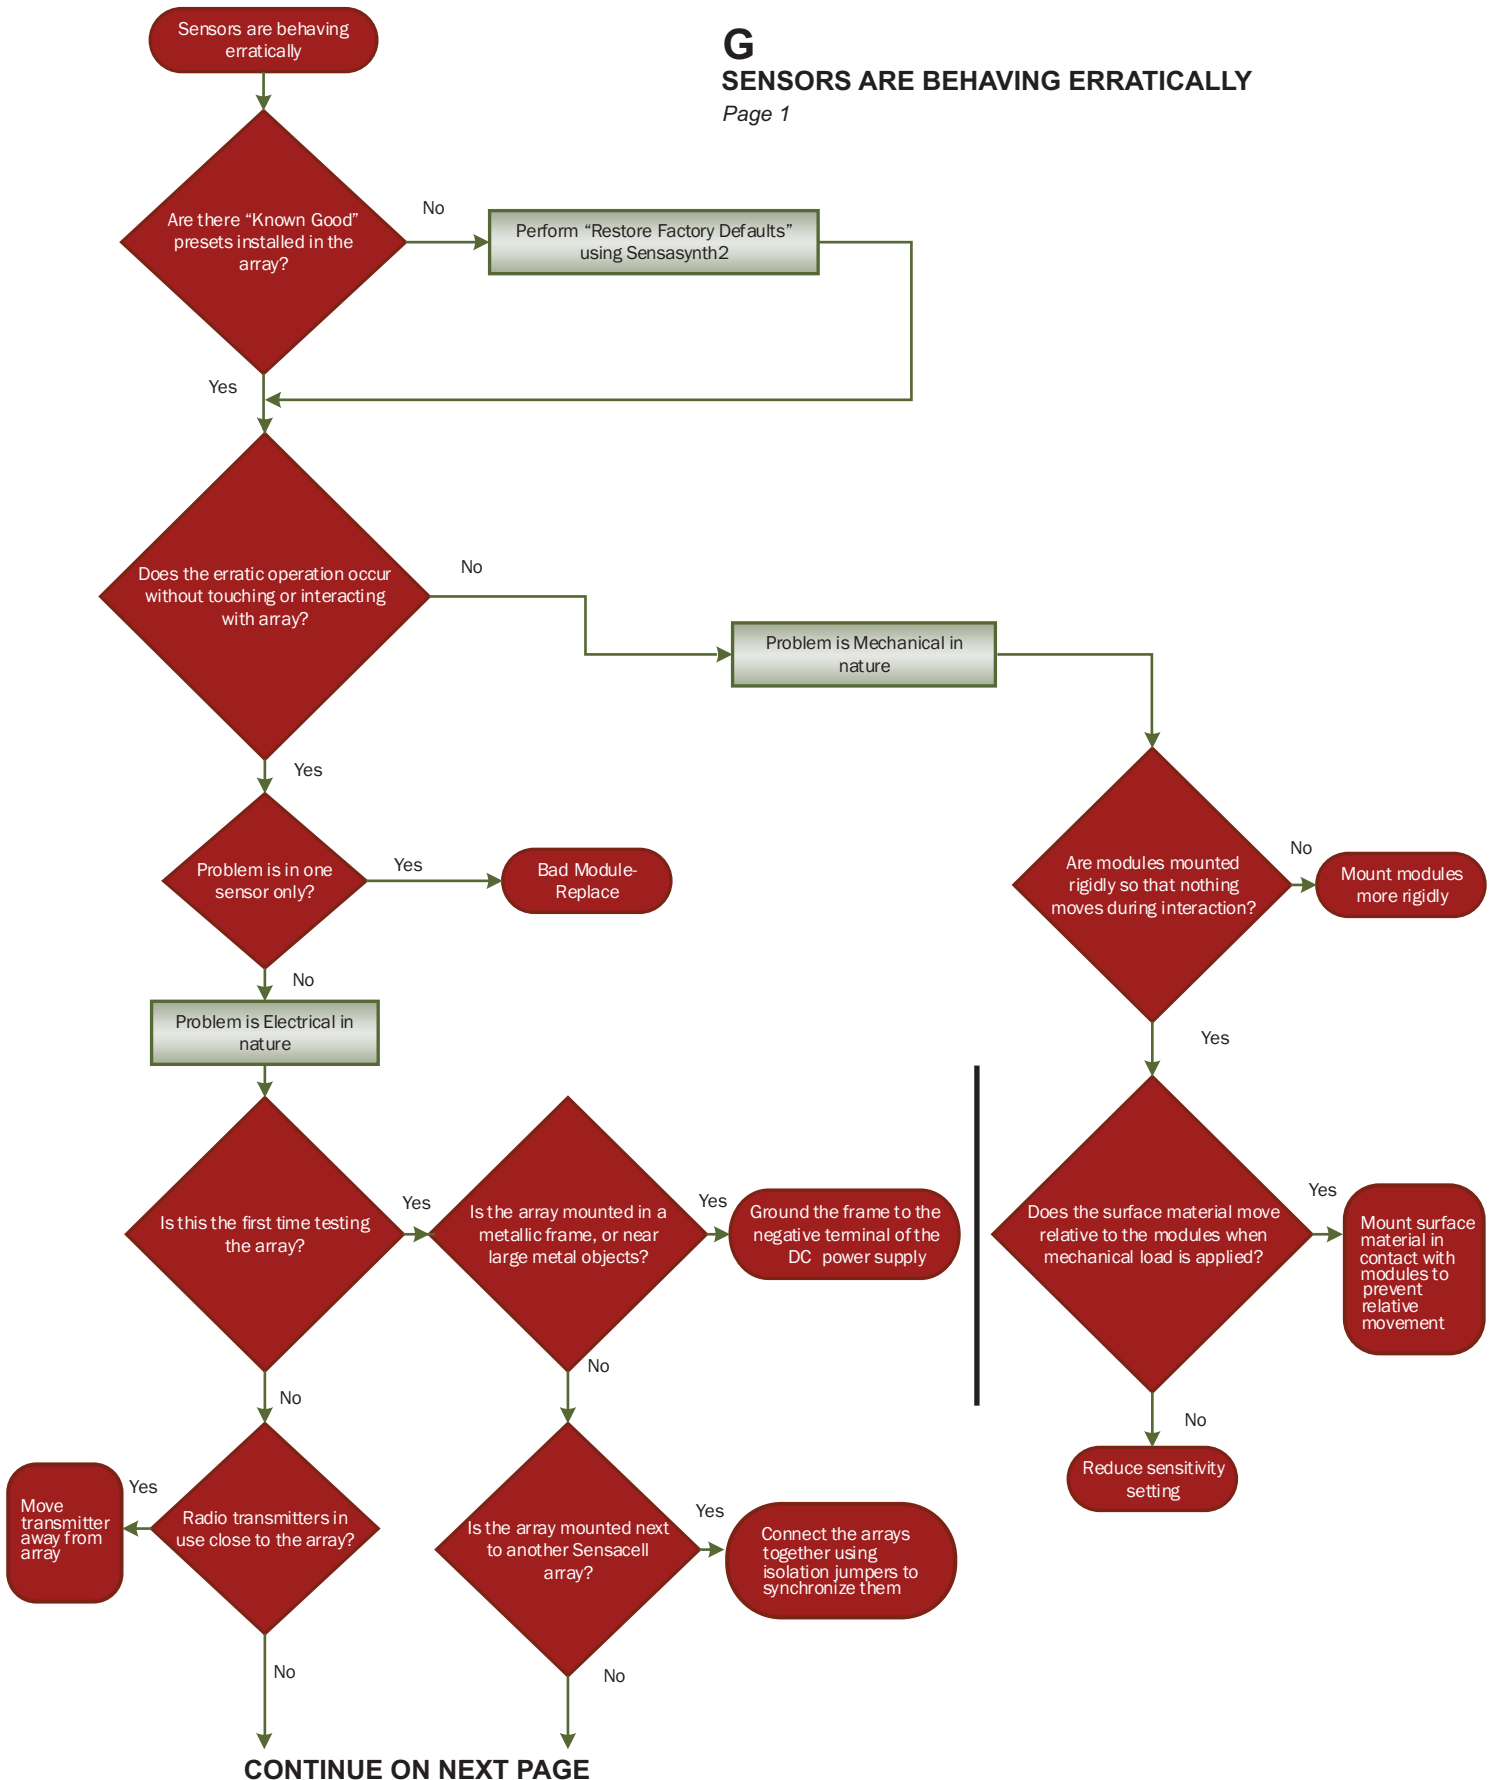

G SENSORS ARE BEHAVING ERRATICALLY Page 2

CONTINUED FROM PREVIOUS PAGE

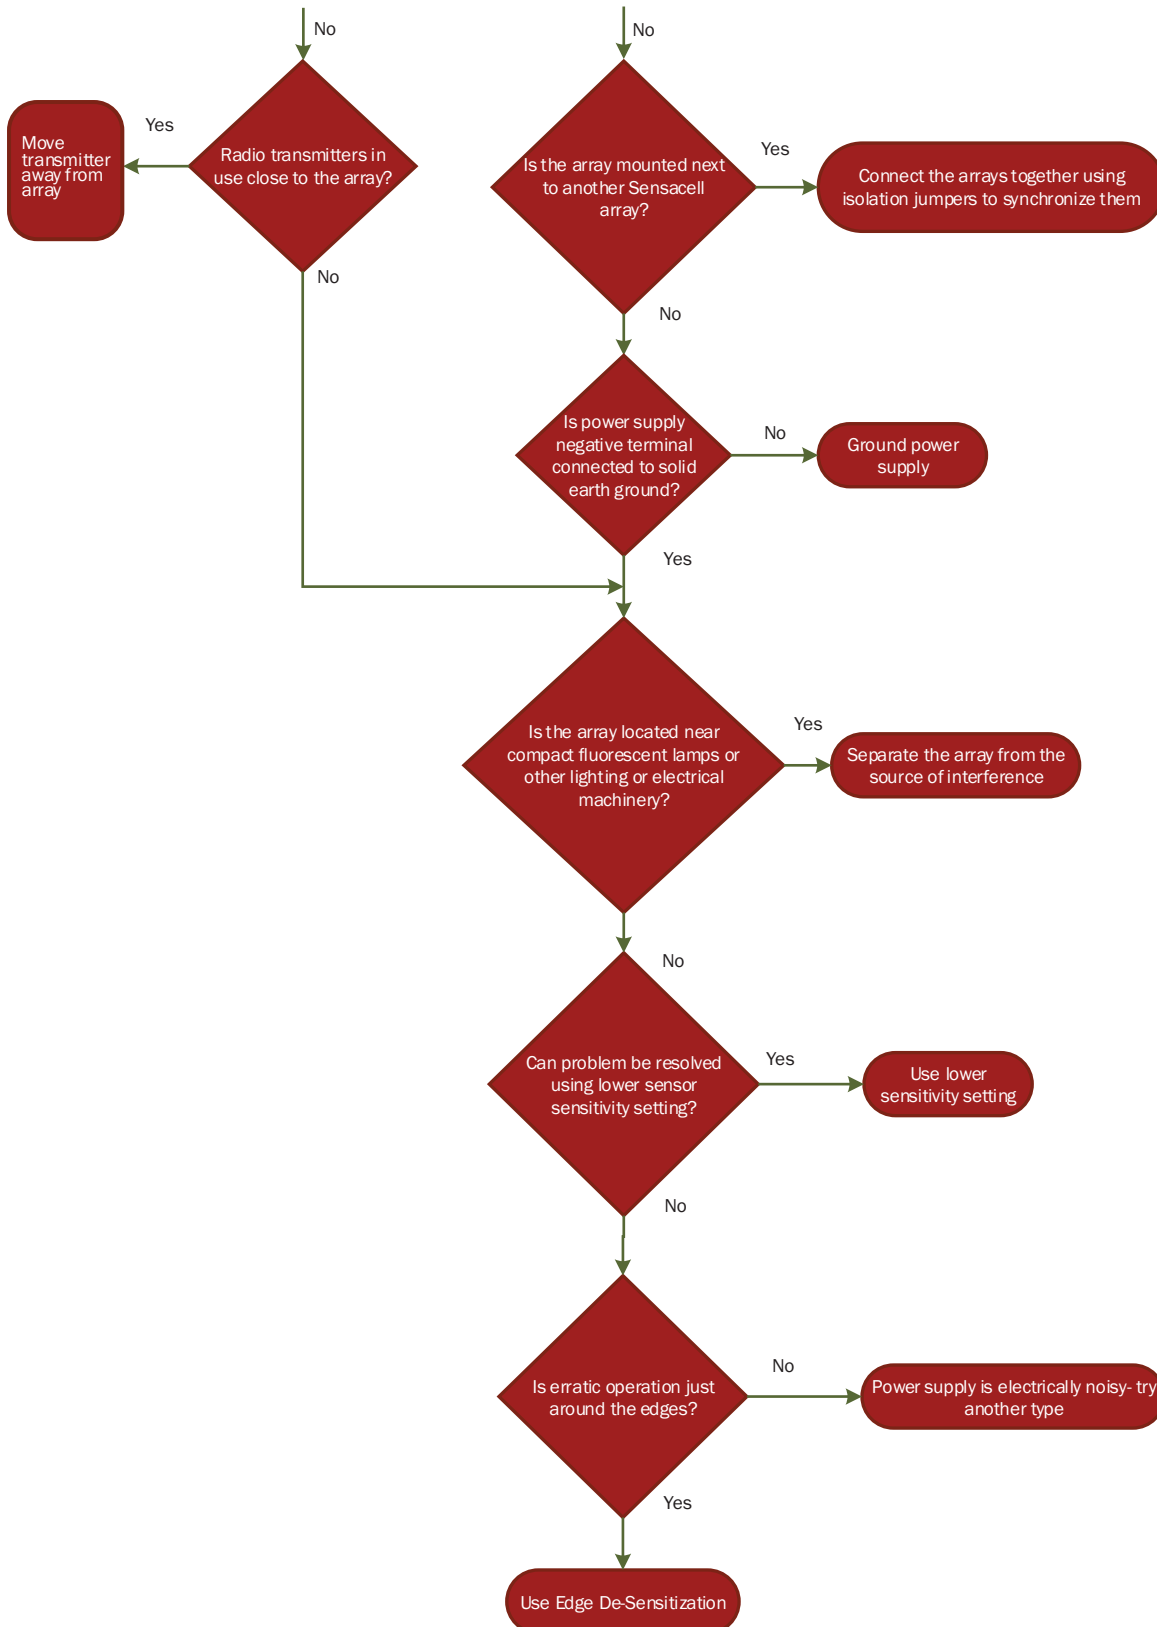

H SENSACELL ARRAY NOT WORKING CORRECTLY

